AUTO LUBE ONE-240 #4531

DATA SHEET



AUTO-LUBE One

A battery powered, self-contained automatic lubricator that provides precise, reliable and economical lubrication

General Description

The AUTO-LUBE ONE is a reusable, battery powered, electro-mechanical lubricator designed for single-point applications. The AUTO-LUBE ONE uses the same proven mechanical design as existing AUTO-LUBE models but in a lower output pressure version and with a highly simplified programming method. It's constant 140psi lubricant output pressure allows the unit to be direct mounted or remote mounted up to 6 feet away from the lube point. It is currently available in a 240cc model. The AUTO-LUBE ONE is self-contained with no external wiring required and can be used plant wide on a variety of applications.

Programming the ONE

The AUTO-LUBE ONE daily lubricant output is programmed using the simple AUTO FIT-TING system. The Yellow, Green, Red and White timing AUTOs determine how long it takes to empty the lubricant cartridge. There are four basic time settings 1, 3, 6 and 12 months that can handle most applications. Once the appropriate AUTO fittings is installed, the program is retained in the AUTO fitting allowing the user to install a different AUTO-LUBE ONE lubricator and follow the same output program.



Operation

The AUTO-LUBE ONE metered positive displacement pump has been primed before shipment and is ready for use. On first installation, all fittings, lube lines and bearings should be pre-charged with the same lubricant that was ordered with the AUTO-LUBE ONE lubricator. Next, install the appropriate AUTO fitting with the metal adapter on your lube point. Screw the AUTO-LUBE ONE on the AUTO fitting. The unit will cycle once and proceed to follow the program setting. Periodic visual inspection is recommended for all AU-TO-LUBE lubricators.

When the lubricant cartridge is empty, unscrew the AUTO-LUBE ONE lubricator from the AUTO fitting. Place the unit on a firm surface, outlet end down. Push down on the clear plastic housing while turning the black plastic locking ring counter-clockwise. The housing and spring assembly will separate from the pump base. Remove the empty cartridge and battery pack and replace with a new one.



Benefits

Reduce production downtime by lubricating your equipment while in operation

Improve safety by remote mounting the lubricator up to 6 feet from lube points in hazardous locations

Easily integrates with your current lubrication program

Reduce lubrication costs by utilizing "Minimal Lubrication Practices"

DATA SHEET AUTO-LUBE ONE

Specifications	
Operation:	Electro-Mechanical, Positive displacement pump
Lubricant cartridge capacity:	240cc (Replaceable)
Compatible lubricants:	Specify lubricant
Connection thread:	1/4 R Male (1/8" or 1/4"NPT Adapter included)
Max operating pressure:	140psi (10 bar)
Temperature range:	5°F to 120°F (-15°C to 50°C)
Output timing settings:	1, 3, 6 or 12 month settings
Power supply:	4.5VDC Alkaline battery pack
External On/Off Control	No
Remote installation:	Up to 6 feet (2 meters)
Reusable:	Yes
Multi-Point capable:	No
Warranty:	3 Year limited

*Maximum lube line length is dependent on ambient temperature, grease type and application back pressure.






Motor application

Accessories



Protective Cover

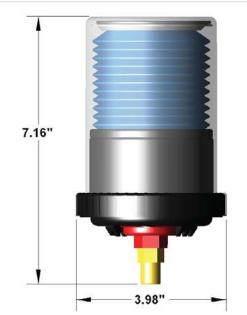


Typical Applications

- Pumps
- Fans
- Conveyors
- General plantwide lubrication



Installation Kit

Installation Instructions

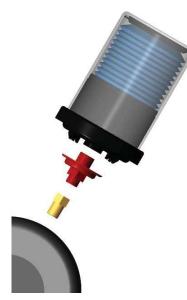

The AUTO-LUBE ONE is easy to install.



Step 1 – Install the metal adapter onto the lube point.

Chains & Rails Cranes & Hoists Elevators/Lifts/Conveyors Fans & Blowers General Production Equipment Machining Center Mining Equipment Motors & Generators Pumps Steel Processing

Typical Applications



Step 2 – Hand tighten the plastic AUTO fitting into the metal adapter.



Step 3 – Screw the AUTO-LUBE ONE lubricator onto the plastic AUTO fitting.