

Quick Fix Gun #4965

Instruction Sheet



Parts:

- Dispenser gun
- Plunger
- Mixing nozzle
- Quick Fix Cartridge



Instructions:

1. Select the plunger that corresponds with the ratio (i.e. 1:1, 2:1) of the product cartridge.
2. Push and hold the blue button located at the back of the gun, while inserting the wide, flat end of the plunger, channel side up, into the front of the gun.
3. Continue to push the plunger into the gun until the flat end emerges from the back of the gun. Then pull the flat end of the plunger out until the plunger is fully retracted. Release the blue button.
4. To open the blue front cartridge housing, grasp it between your thumb and forefinger and push it up from inside the opening. The blue housing will flip up.
5. Insert the cartridge into the gun's open cartridge housing. Close the housing.
6. Remove the cap from the tip of the cartridge by twisting the cap one-quarter turn and pulling the cap off.
7. Attach the mix nozzle onto the cartridge opening and rotate the nozzle one-quarter turn to lock it in place.
8. The gun is now ready to use.
9. Pull trigger to mix and dispense epoxy.
10. When finished, retract the plunger, remove the cartridge, and dispose of the mix nozzle. To preserve unused product, replace the cap onto the cartridge.